

| Digital Still Camera / Instruction Manual | | | |
|---|----|--|--|
| Cámara fotografía digital / Manual de instrucciones | ES | | |













English

Learning more about the camera ("Cyber-shot User Guide")



"Cyber-shot User Guide" is an on-line manual. Refer to it for in-depth instructions on the many functions of the camera.

- ① Access the Sony support page. http://www.sony.net/SonyInfo/Support/
- 2 Select your country or region.
- ③ Search for the model name of your camera within the support page.
 - Check the model name on the bottom of your camera.

Checking the supplied items

The number in parentheses indicates the number of pieces.

- Camera (1)
- Rechargeable battery pack NP-BN (1)
 (This rechargeable battery pack cannot be used with Cyber-shot that are supplied with the NP-BN1 battery pack.)
- Micro USB cable (1)
- AC Adaptor AC-UB10/UB10B/UB10C/UB10D (1)
- Power cord (mains lead) (not supplied in the USA and Canada) (1)
- Wrist strap (1)
- Instruction Manual (this manual) (1)

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product.

| Model No. D | SC-WX100/DSC-WX150 |
|-------------|-----------------------------------|
| Serial No | |
| Model No. A | C-UB10/AC-UB10B/AC-UB10C/AC-UB10D |
| Serial No. | |

GB

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet.

CAUTION

| Battery pack

If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following cautions.

- · Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.
- · Do not incinerate or dispose of in fire.
- · Do not handle damaged or leaking lithium ion batteries.

- Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack.
- · Keep the battery pack out of the reach of small children.
- · Keep the battery pack dry.
- Replace only with the same or equivalent type recommended by Sony.
- · Dispose of used battery packs promptly as described in the instructions.

AC Adaptor

Connect the AC Adaptor to the nearest wall outlet (wall socket).

If some trouble occurs while using the AC Adaptor, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).

The power cord (mains lead), if supplied, is designed specifically for use with this camera only, and should not be used with other electrical equipment.

For Customers in the U.S.A. and Canada

| RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free

1-800-822-8837, or visit http://www.rbrc.org/

Caution: Do not handle damaged or leaking Lithium-Ion batteries.

Battery pack

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

For Customers in the U.S.A.

UL is an internationally recognized safety organization.

The UL Mark on the product means it has been UL Listed.

If you have any questions about this product, you may call:

Sony Customer Information Center

1-800-222-SONY (7669)
The number below is for the FCC related matters only.

| Regulatory Information

Declaration of Conformity

Trade Name: SONY

Model No.: DSC-WX100

Responsible Party: Sony Electronics Inc. Address: 16530 Via Esprillo,

San Diego, CA 92127 U.S.A.

Telephone No.: 858-942-2230

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Declaration of Conformity

Trade Name: SONY

Model No.: DSC-WX150

Responsible Party: Sony Electronics Inc. Address: 16530 Via Esprillo, San Diego, CA 92127 U.S.A.

Telephone No.: 858-942-2230

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

GB

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For Customers in Europe

Notice for the customers in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

GB

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product,

please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent

potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely.

Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.


Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an # or $\textcircled{\triangledown}$ mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

Identifying parts

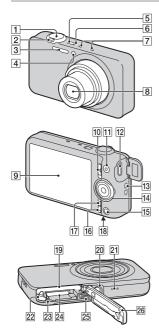

- 1 Shutter button
- [2] For shooting: W/T (Zoom) lever For viewing: Q (Playback zoom) lever/► (Index) lever
- 3 Flash
- 4 Self-timer lamp/Smile Shutter lamp/AF illuminator
- 5 ON/OFF (Power) button
- 6 Power/Charge lamp
- 7 Microphone
- 8 Lens


- 9 LCD screen
- 10 Mode switch


(Still Image)/ (Sweep Panorama)/ (Movie)

- 11 MOVIE (Movie) button
- 12 HDMI mini jack
- 13 Hook for wrist strap
- 14 Control wheel
- 15 (Playback) button
- 16 **?**/茴 (In-Camera Guide/Delete) button
- 17 MENU button
- [18] **▼** (TransferJetTM) mark
- 19 Battery insertion slot
- 20 Tripod receptacle
 - Use a tripod with a screw less than 5.5 mm (7/32 inches) long.
 Otherwise, you cannot firmly secure the camera, and damage to the camera may occur.
- 21 Speaker
- 22 Battery eject lever
- 23 Access lamp
- 24 Memory card slot
- 25 Micro USB connector
- 26 Battery/memory card cover

GB


Inserting the battery pack



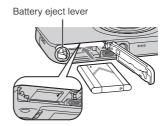

- 1 Open the cover.
- 2 Insert the battery pack.
 - While pressing the battery eject lever, insert the battery pack as illustrated. Make sure that the battery eject lever locks after insertion.
 - Closing the cover with the battery inserted incorrectly may damage the camera.

Charging the battery pack

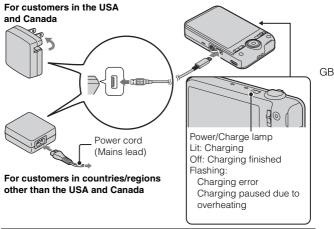

- 1 Connect the camera to the AC Adaptor (supplied), using the micro USB cable (supplied).
- 2 Connect the AC Adaptor to the wall outlet (wall socket). The Power/Charge lamp lights orange, and charging starts.
 - Turn off the camera while charging the battery.
 - You can charge the battery pack even when it is partially charged.
 - When the Power/Charge lamp flashes and charging is not finished, remove and re-insert the battery pack.

Notes

- If the Power/Charge lamp on the camera flashes when the AC Adaptor is
 connected to the wall outlet (wall socket), this indicates that charging is
 temporarily stopped because the temperature is outside the recommended range.
 When the temperature gets back within the appropriate range, the charging
 resumes. We recommend charging the battery pack in an ambient temperature of
 between 10°C to 30°C (50°F to 86°F).
- The battery pack may not be effectively charged if the terminal section of the battery is dirty. In this case, wipe any dust off lightly using a soft cloth or a cotton swab to clean the terminal section of the battery.
- Connect the AC Adaptor (supplied) to the nearest wall outlet (wall socket). If
 malfunctions occur while using the AC Adaptor, disconnect the plug from the wall
 outlet (wall socket) immediately to disconnect from the power source.
- When charging is finished, disconnect the AC Adaptor from the wall outlet (wall socket).
- Be sure to use only genuine Sony brand battery packs, micro USB cable (supplied) and AC Adaptor (supplied).
- BC-TRN2 battery charger (sold separately) is able to quick-charge the NP-BN rechargeable battery pack supplied with this model. BC-TRN battery charger (sold separately) is not able to quick-charge the NP-BN rechargeable battery pack supplied with this model.

■ Charging time (Full charge)

The charging time is approximately 115 min. using the AC Adaptor (supplied).

Note

 The above charging time applies when charging a fully depleted battery pack at a temperature of 25°C (77°F). Charging may take longer depending on conditions of use and circumstances.

■ Charging by connecting to a computer

The battery pack can be charged by connecting the camera to a computer using a micro USB cable.



GB

Note

- · Note the following points when charging via a computer:
 - If the camera is connected to a laptop computer that is not connected to a power source, the laptop battery level decreases. Do not charge for an extended period of time.
 - Do not turn on/off or restart the computer, or wake the computer to resume from sleep mode when a USB connection has been established between the computer and the camera. The camera may cause a malfunction. Before turning on/off, or restarting the computer or waking the computer from sleep mode, disconnect the camera and the computer.
 - No guarantees are made for charging using a custom-built computer or a modified computer.

Battery life and number of images that can be recorded and played back

| | | Battery life | Number of images |
|-----------------|-----------|------------------|---------------------|
| Shooting (still | DSC-WX100 | Approx. 120 min. | Approx. 240 images |
| images) | DSC-WX150 | Approx. 120 min. | Approx. 240 images |
| Viewing (still | DSC-WX100 | Approx. 180 min. | Approx. 3600 images |
| images) | DSC-WX150 | Approx. 180 min. | Approx. 3600 images |
| Shooting | DSC-WX100 | Approx. 60 min. | _ |
| (movies) | DSC-WX150 | Approx. 60 min. | _ |

Notes

- The above number of images applies when the battery pack is fully charged. The number of images may decrease depending on the conditions of use.
- The number of images that can be recorded is for shooting under the following conditions:
 - Using Sony "Memory Stick PRO Duo" (Mark2) media (sold separately)
 - The battery pack is used at an ambient temperature of 25°C (77°F).
 - [Disp. Resolution]: [Standard]
- The number for "Shooting (still images)" is based on the CIPA standard, and is for shooting under the following conditions:

(CIPA: Camera & Imaging Products Association)

- DISP (Display Setting) is set to [ON].
- Shooting once every 30 seconds.
- The zoom is switched alternately between the W and T ends.
- The flash strobes once every two times.
- The power turns on and off once every ten times.
- The battery life for movies applies shooting under the following conditions:
 - Movie quality: AVC HD HQ
 - When continuous shooting ends because of set limits (page 25), press the MOVIE (Movie) button again and continue shooting. Shooting functions such as the zoom do not operate.

■ Supplying power

The camera can be supplied with power from the wall outlet (wall socket) by connecting to the AC Adaptor, using the micro USB cable (supplied).


You can import images to a computer without worrying about draining the battery pack by connecting the camera to a computer using the micro USB cable.


In addition, you can use the AC Adaptor AC-UD10 (sold separately) for shooting to supply power when shooting.

Notes

- · Power cannot be supplied when the battery pack is not inserted in the camera.
- When the camera is connected directly to a computer or to a power outlet using the supplied AC Adaptor, power supply is available only in playback mode. If the camera is in shooting mode or while you are changing the settings of the camera, power is not supplied even if you make a USB connection using the micro USB cable.
- If you connect the camera and a computer using the micro USB cable while the
 camera is in playback mode, the display on the camera will change from the
 playback screen to the USB connection screen. Press (Playback) button to
 switch to the playback screen.

Inserting a memory card (sold separately)





GB

- 1 Open the cover.
- 2 Insert the memory card (sold separately).
 - With the notched corner facing as illustrated, insert the memory card until it clicks into place.
- 3 Close the cover.

■ Memory cards that can be used

| | Memory card | For still images | For movies |
|---|----------------------------|------------------|-----------------------|
| | Memory Stick PRO Duo | 0 | O (Mark2 only) |
| Α | Memory Stick PRO-HG Duo | 0 | 0 |
| | Memory Stick Duo | 0 | _ |
| В | Memory Stick Micro (M2) | 0 | _ |
| | Memory Stick Micro (Mark2) | 0 | 0 |
| | SD memory card | 0 | O (Class 4 or faster) |
| С | SDHC memory card | 0 | O (Class 4 or faster) |
| | SDXC memory card | 0 | O (Class 4 or faster) |
| D | microSD memory card | 0 | O (Class 4 or faster) |
| | microSDHC memory card | 0 | O (Class 4 or faster) |

- In this manual, the products in the table are collectively referred to as follows:
 - A: "Memory Stick Duo" media
 - B: "Memory Stick Micro" media
 - C: SD card
 - D: microSD memory card

Note

 To use a "Memory Stick Micro" media or microSD memory card with the camera, be sure to insert it into a dedicated adaptor first.


■To remove the memory card/battery pack

Memory card: Push the memory card in once to eject the memory card. Battery pack: Slide the battery eject lever. Be sure not to drop the battery pack.

Note

Never remove the memory card/battery pack when the access lamp (page 9) is lit.
 This may cause damage to data in the memory card/internal memory.

Setting the clock

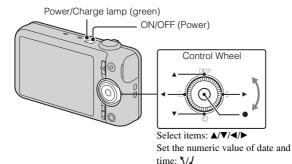

1 Press the ON/OFF (Power) button.

Date & Time setting is displayed when you turn on the camera for the first time.


Set:

- It may take time for the power to turn on and allow operation.
- 2 Select a desired language.
- 3 Select a desired geographic location by following the on-screen instructions, then press on the control wheel.

- 4 Set [Date & Time Format], [Daylight Savings] or [Summer Time] and [Date & Time], then select [OK] → [OK].
 - Midnight is indicated as 12:00 AM, and noon as 12:00 PM.
- 5 Follow the instructions on the screen.
 - The battery pack will run out quickly when:
 - -[Disp. Resolution] is set to [High].

GB

Shooting still images/movies



Shooting still images

- 1 Press the shutter button halfway down to focus. When the image is in focus, a beep sounds and the indicator lights.
- 2 Press the shutter button fully down to shoot an image.


Shooting movies

- Press the MOVIE (Movie) button to start recording.
 - \bullet Use the W/T (zoom) lever to change the zoom scale.
 - Press the shutter button to shoot still images while continuing to record the movie.
- 2 Press the MOVIE button again to stop recording.

Notes

- The sound of the lens and lever operating will be recorded when the zoom function operates while shooting a movie. The sound of the MOVIE button operating may also be recorded when movie recording is finished.
- Continuous shooting is possible for approximately 29 minutes at one time at the camera's default settings and when the temperature is approximately 25°C (77°F).
 When movie recording is finished, you can restart recording by pressing the MOVIE button again. Recording may stop to protect the camera depending on the ambient temperature.

Viewing images

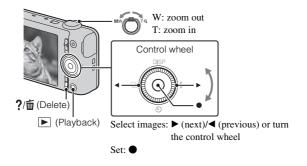

- Press the (Playback) button.
 - When images on a memory card recorded with other cameras are played back on this camera, the registration screen for the data file appears.

■ Selecting next/previous image

Select an image by pressing \blacktriangleright (next)/ \blacktriangleleft (previous) on the control wheel or by turning the control wheel. Press \bullet in the center of the control wheel to view movies.

Deleting an image

- ① Press ?/面 (Delete) button.
- ② Select [This Image] with ▲ on the control wheel, then press ●.

■ Returning to shooting images

Press the shutter button halfway down.

In-Camera Guide

This camera is equipped with a built-in instruction guide. This allows you to search the camera's functions according to your needs.



- 1 Press the MENU button.
- 2 Select the desired MENU item, then press the ?/亩 (In-Camera Guide) button.


The operation guide for the selected item is displayed.


• If you press the ?/\overline{\pi} (In-Camera Guide) button when the MENU screen is not displayed, you can search the guide using keywords or icons.

GB

Introduction of other functions

Other functions used when shooting or playing back can be operated using the control wheel or MENU button on the camera. This camera is equipped with a Function Guide that allows you to easily select from the functions. While displaying the guide, you can use various functions.





Control wheel

DISP (Display Setting): Allows you to change the screen display.

- 🐧 (Self-Timer): Allows you to use the self-timer.
- $\hfill \hfill \Box$ (Cont. Shooting Settings): Allows you to use the burst shooting mode.
- 4 (Flash): Allows you to select a flash mode for still images. Center button (Tracking focus): The camera tracks the subject and adjusts focus automatically even when the subject is moving.

■ Menu Items

Shooting

| REC Mode | Select still image recording mode. |
|----------------------------|---|
| Movie shooting scene | Select movie recording mode. |
| Panorama Shooting Scene | Select recording mode when shooting panoramic images. |
| Picture Effect | Shoot a still image with an original texture according to the desired effect. |
| Scene Selection | Select pre-set settings to match various scene conditions. |
| Easy Mode | Shoot still images using minimal functions. |

| Defocus Effect | Set the level of background defocus effect when shooting in Background Defocus mode. | |
|--|--|--|
| Still Image Size(Dual Rec) | Set the still image size shot while recording a movie. | |
| Still Image Size/ Panorama Image Size/Movie Size/ Movie Quality | Select the image size and the quality for still images, panoramic images or movie files. | |
| HDR Painting effect | When [HDR Painting] is selected in Picture Effect, sets the effect level. | |
| Area of emphasis | When [Miniature] is selected in Picture Effect, sets the part to focus on. | |
| Color hue | When [Toy camera] is selected in Picture Effect, sets the color hue. | |
| Extracted Color | When [Partial Color] is selected in Picture Effect, selects the color to extract. | |
| Watercolor Effect | When [Watercolor] is selected in Picture Effect, sets the effect level. | |
| Illustration Effect | When [Illustration] is selected in Picture Effect, sets the effect level. | |
| EV | Adjust the exposure manually. | |
| ISO | Adjust the luminous sensitivity. | |
| White Balance | Adjust color tones of an image. | |
| Underwater White Balance | Adjust color tones when shooting underwater. | |
| Focus | Select the focus method. | |
| Metering Mode | Select the metering mode that sets which part of the subject to measure to determine the exposure. | |
| Cont. Shooting Interval | Select the number of images taken per second for Burst shooting. | |
| Scene Recognition | Set to automatically detect shooting conditions. | |
| Soft Skin Effect | Set the Soft Skin Effect and the effect level. | |
| Smile Shutter | Set to automatically release the shutter when a smile is detected. | |

GB

| Smile Detection Sensitivity | Set the Smile Shutter function sensitivity for detecting smiles. |
|--------------------------------|--|
| Face Detection | Select to detect faces and adjust various settings automatically. |
| Anti Blink | Set to automatically shoot two images and select image in which the eyes are not blinking. |
| Movie SteadyShot | Set the strength of SteadyShot in movie mode. If you change the setting for [Movie SteadyShot], the angle of view will change. |
| In-Camera Guide | Search the camera's functions according to your needs. |

Viewing

| Easy Mode | Increase the text size on the screen for ease of use. |
|---------------------------------|---|
| Slideshow | Select a method of continuous playback. |
| Send by TransferJet | Transfer data by closely aligning two products equipped with TransferJet. |
| Delete | Delete an image. |
| Retouch | Retouch an image using various effects. |
| Picture Effect | Add various texture on images. |
| 3D Viewing | Set to play back images shot in 3D mode on a 3D TV. |
| View Mode | Select the display format for images. |
| Display Cont. Shooting Group | Select to display burst images in groups or display all images during playback. |
| Protect | Protect the images. |
| Print (DPOF) | Add a print order mark to a still image. |
| Rotate | Rotate a still image to the left. |
| In-Camera Guide | Search the camera's functions according to your needs. |

GE

■ Setting items

If you press the MENU button while shooting or during playback,

⚠ (Settings) is provided as a final selection. You can change the default settings on the ⚠ (Settings) screen.

| ক্র Shooting Settings | Movie format/AF Illuminator/Grid Line/Clear Image Zoom/Digital Zoom/Wind Noise Reduct./Red Eye Reduction/Blink Alert/Write Date/Disp. Resolution |
|-----------------------------|--|
| ช T Main Settings | Beep/Panel Brightness/Language Setting/Display color/ Demo Mode/Initialize/Function Guide/CTRL FOR HDMI/Eco Mode/USB Connect Setting/USB Power Supply/LUN Setting/Download Music/Empty Music/ TransferJet/Eye-Fi/Version |
| Memory Card Tool* | Format/Create REC.Folder/Change REC.Folder/Delete REC.Folder/Copy/File Number |
| Clock Settings | Area Setting/Date & Time Setting |

^{*} If a memory card is not inserted, ((Internal Memory Tool) will be displayed and only [Format] can be selected.

Install PC application (Windows)

The built-in software "PlayMemories Home" allows you to import still images and movies to your computer and use them.

You can shoot or play back images on this camera even if you do not install "PlayMemories Home", however, "PlayMemories Home" is required to import AVCHD movies to your computer.

- 1 Connect the camera to a computer.
- 2 Windows 7: [Computer] → camera icon → media icon → Double-click [PMHOME.EXE] Windows XP/Vista: [Computer] (in Windows XP, [My Computer]) → [PMHOME] → Double-click [PMHOME.EXE]
- 3 Follow the instructions on the screen to complete the installation.

Note

 "PlayMemories Home" is not compatible to Mac OS. If you play back images on a Mac, use the applications that are installed on your Mac.
 For details, see http://www.sony.co.jp/imsoft/Mac/

■ Features of "PlayMemories Home"

Below are examples of the functions available when you use "PlayMemories Home". To take advantage of the various "PlayMemories Home" functions, connect to the Internet and install the "Expanded Feature".

- You can import images shot with the camera to a computer and display them.
- You can display images stored on a computer by shooting date in a calendar display.
- You can correct (Red Eye Correction, etc.) still images, print the images, send images by e-mail, and change the shooting date and time.
- You can save and print images with the date.
- You can create a disc from AVCHD movies imported to a computer. (Expanded Feature)

Number of still images and recordable time of movies

The number of still images and recordable time may vary depending on the shooting conditions and the memory card.

■ Still images

(Units: Images) GB

| Capacity | Internal memory | Memory card |
|-----------|-----------------|-------------|
| Size | Approx. 19 MB | 2 GB |
| 18M | 3 | 295 |
| VGA | 65 | 6400 |
| 16:9(13M) | 3 | 330 |

Movies

The table below shows the approximate maximum recording times. These are the total times for all movie files. Continuous shooting is possible for approximately 29 minutes. The maximum size of an MP4-format movie file is up to approximately 2 GB.

(h (hour), m (minute))

| | Capacity | Internal memory | Memory card |
|-----------|----------|-----------------|----------------|
| Size | | Approx. 19 MB | 2 GB |
| AVC HD 24 | M (FX) | _ | 10 m (10 m) |
| AVC HD 9N | M (HQ) | _ | 20 m (15 m) |
| MP4 12M | | _ | 15 m |
| MP4 3M | | _ | 1 h 5 m |

The number in () is the minimum recordable time.

 The recordable time of movies varies because the camera is equipped with VBR (Variable Bit Rate), which automatically adjusts image quality depending on the shooting scene. When you record a fast-moving subject, the image is clearer but the recordable time is shorter because more memory is required for recording.
 The recordable time also varies depending on the shooting conditions, the subject or the image quality/size settings.

Notes on using the camera

Functions built into this camera

 This manual describes each of the functions of TransferJet compatible/ incompatible devices, 1080 60i-compatible devices and 1080 50i-compatible devices.

To check if your camera supports the TransferJet function, and whether it is a 1080 60i-compatible device or 1080 50i-compatible device, check for the following marks on the bottom of the camera.

TransferJet-compatible device: **▼** (TransferJet)

1080 60i-compatible device: 60i 1080 50i-compatible device: 50i

- Do not watch 3D images shot with this camera for extended periods of time on 3D-compatible monitors.
- When you view 3D images shot with this camera on a 3D-compatible monitors, you may experience discomfort in the form of eye strain, fatigue, or nausea. To prevent these symptoms, we recommend that you take regular breaks. However, you need to determine for yourself the length and frequency of breaks you require, as they vary according to the individual. If you experience any type of discomfort, stop viewing the 3D images until you feel better, and consult a physician as necessary. Also refer to the operating instructions supplied with the device or software you have connected or are using with this camera. Note that a child's eyesight is still at the development stage (particularly children below the age of 6). Consult a pediatrician or ophthalmologist before letting your child view 3D images, and make sure he/she observes the above precautions when viewing such images.

On use and care

Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping, or stepping on the product. Be particularly careful of the lens.

Notes on recording/playback

- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splash-proof, nor water-proof.
- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- · If moisture condensation occurs, remove it before using the camera.
- Do not shake or strike the camera. It may cause a malfunction and you may not be
 able to record images. Furthermore, the recording media may become unusable or
 image data may be damaged.

Do not use/store the camera in the following places

- In an extremely hot, cold or humid place
 In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- Under direct sunlight or near a heater
 The camera body may become discolored or deformed, and this may cause a malfunction
- · In a location subject to rocking vibration
- Near a location that generates strong radio waves, emits radiation or is strongly
 magnetic place. Otherwise, the camera may not properly record or play back
 images.

• In sandy or dusty places

Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

On carrying

Do not sit down in a chair or other place with the camera in the back pocket of your trousers or skirt, as this may cause malfunction or damage the camera.

Notes on the screen and lens

The screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the screen. These dots are a normal result of the manufacturing process, and do not affect the recording.

On camera's temperature

Your camera and battery may get hot due to continuous use, but it is not a malfunction.

On the overheat protection

Depending on the camera and battery temperature, you may be unable to record movies or the power may turn off automatically to protect the camera.

A message will be displayed on the screen before the power turns off or you can no longer record movies. In this case, leave the power off and wait until the camera and battery temperature goes down. If you turn on the power without letting the camera and battery cool enough, the power may turn off again or you may be unable to record movies.

On charging the battery

If you charge a battery that has not been used for a long time, you may be unable to charge it to the proper capacity.

This is due to the battery characteristics, and is not a malfunction. Charge the battery again.

Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. To prevent damage to the finish or casing:

 Do not expose the camera to chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide.

On Illustrations

Illustrations used in this manual are of DSC-WX100 unless noted otherwise.

Specifications

Camera

[System]

Image device: 7.76 mm (1/2.3 type) Exmor R CMOS sensor

Total pixel number of camera:

Approx. 18.9 Megapixels

Effective pixel number of camera: Approx. 18.2 Megapixels

Lens: Sony G 10x zoom lens

f = 4.45 mm - 44.5 mm (25 mm - 250 mm (35 mm film equivalent))

F3.3 (W) - F5.9 (T)

While shooting movies (16:9): 27.5 mm – 275 mm*

While shooting movies (4:3):

33.5 mm – 335 mm*

* When [Movie SteadyShot] is set to [Standard]

SteadyShot: Optical

Exposure control: Automatic exposure, Scene Selection (15 modes)

White balance: Automatic, Daylight, Cloudy, Fluorescent 1/2/3,

Incandescent, Flash, One Push

Underwater White balance: Automatic, Underwater 1/2, One Push

Signal format:

For 1080 50i: PAL color, CCIR standards HDTV 1080/50i

specification

For 1080 60i: NTSC color, EIA standards HDTV 1080/60i

specification

File format:

Still images: JPEG (DCF, Exif, MPF Baseline) compliant, DPOF

compatible

3D still images: MPO (MPF Extended (Disparity Image))

compliant

Movies (AVCHD format):

AVCHD format Ver. 2.0

compatible

Video: MPEG-4 AVC/H.264

Audio: Dolby Digital 2ch,

equipped with Dolby Digital Stereo Creator

Creator

 Manufactured under license from Dolby Laboratories.

Movies (MP4 format):

Video: MPEG-4 AVC/H.264 Audio: MPEG-4 AAC-LC 2ch

Recording media: Internal Memory

(Approx. 19 MB), "Memory Stick Duo" media, "Memory Stick Micro" media, SD cards, microSD

memory cards

Flash: Flash range (ISO sensitivity (Recommended Exposure Index)

set to Auto):

Approx. 0.2 m to 3.7 m (7 7/8 inches to 12 feet 1 3/4 inches) (W)

Approx. 1.5 m to 2.2 m (4 feet 11 1/8 inches to 7 feet

2 5/8 inches) (T)

[Input and Output connectors]

HDMI connector: HDMI mini jack Micro USB connector:

USB communication

USB communication: Hi-Speed USB (USB 2.0)

[Screen]

LCD screen:

DSC-WX100:

6.7 cm (2.7 type) TFT drive

DSC-WX150:

7.5 cm (3.0 type) TFT drive Total number of dots:

otal number of dots:

[Power, general]

Power: Rechargeable battery pack

NP-BN, 3.6 V

AC Adaptor AC-UB10/UB10B/ UB10C/UB10D, 5 V

Power consumption (during shooting): 1.0 W

1.0 W Operating temperature: 0 °C to 40 °C

(32 °F to 104 °F)Storage temperature: -20 °C to +60 °C(-4 °F to +140 °F)

Dimensions (CIPA compliant):

DSC-WX100

92.3 mm × 52.4 mm × 21.6 mm (3 3/4 inches × 2 1/8 inches × 7/8 inches) (W/H/D)

DSC-WX150:

94.7 mm × 56.4 mm × 21.6 mm (3 3/4 inches × 2 1/4 inches × 7/8 inches) (W/H/D)

Mass (CIPA compliant) (including NP-BN battery pack, "Memory Stick Duo" media):

DSC-WX100:

Approx. 124 g (4.4 oz) DSC-WX150:

Approx. 133 g (4.7 oz)

Microphone: Stereo Speaker: Monaural Exif Print: Compatible PRINT Image Matching III: Compatible

AC Adaptor AC-UB10/UB10B/ UB10C/UB10D

Power requirements: AC 100 V to 240 V, 50 Hz/60 Hz, 70 mA

Output voltage: DC 5 V, 0.5 A

Operating temperature: 0 °C to 40 °C (32 °F to 104 °F)

Storage temperature: -20 °C to +60 °C (-4 °F to +140 °F)

Dimensions:

Approx. $50 \text{ mm} \times 22 \text{ mm} \times 54 \text{ mm}$ (2 inches \times 7/8 inches \times 2 1/4 inches) (W/H/D)

Mass:

For the USA and Canada: Approx. 48 g (1.7 oz)

For countries or regions other than the USA and Canada: Approx. 43 g (1.5 oz)

Rechargeable battery pack NP-BN

Used battery: Lithium-ion battery Maximum voltage: DC 4.2 V Nominal voltage: DC 3.6 V Maximum charge voltage: DC 4.2 V Maximum charge current: 0.9 A Capacity:

> typical: 2.3 Wh (630 mAh) minimum: 2.2 Wh (600 mAh)

Design and specifications are subject to change without notice.

Trademarks

 The following marks are trademarks of Sony Corporation.

Cuber-shot, "Cyber-shot,"
"Memory Stick PRO Duo,"
"Memory Stick PRO-HG Duo,"
"Memory Stick Duo," "Memory
Stick Micro"

- "AVCHD" and "AVCHD" logotype are trademarks of Panasonic Corporation and Sony Corporation.
 Windows is registered trademark of
- Microsoft Corporation in the United States and/or other countries.
- Mac is registered trademark of Apple Inc.
- SDXC logo is a trademark of SD-3C, LLC.
- "Jand "PlayStation" are registered trademarks of Sony Computer Entertainment Inc.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers.
 However, the ™ or ® marks are not used in all cases in this manual.



- Add further enjoyment with your PlayStation 3 by downloading the application for PlayStation 3 from PlayStation Store (where available.)
- The application for PlayStation 3 requires PlayStation Network account and application download. Accessible in areas where the PlayStation Store is available.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

http://www.sony.net/

Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

GE

Español

Para saber más sobre la cámara ("Guía del usuario de Cyber-shot")



La "Guía del usuario de Cyber-shot" es un manual on-line. Consúltela para ver instrucciones exhaustivas sobre las muchas funciones de la cámara.

- ① Acceda a la página de atención al cliente de Sony. http://www.sony.net/SonyInfo/Support/
- 2 Seleccione su país o región.
- ③ Busque el nombre del modelo de su cámara en la página de atención al cliente.
 - Compruebe el nombre del modelo en la parte inferior de su cámara.

Comprobación de los artículos suministrados

El número entre paréntesis indica el número de piezas.

- · Cámara (1)
- Batería recargable NP-BN (1)
 (Esta batería recargable no se puede utilizar con las Cyber-shot que se suministran con la batería NP-BNL)
- Cable micro USB (1)
- Adaptador de alimentación de ca (FUENTE DE ALIMENTACIÓN) AC-UB10/UB10B/UB10C/UB10D (1)
- Cable de alimentación (no suministrado en EE.UU. y Canadá) (1)
- Correa para muñeca (1)
- Manual de instrucciones (este manual) (1)

Nombre del producto: Cámara Digital Modelo: DSC-WX100/DSC-WX150

POR FAVOR LEA DETALLADAMENTE ESTE MANUAL DE INSTRUCCIONES ANTES DE CONECTAR Y OPERAR ESTE EOUIPO.

RECUERDE QUE UN MAL USO DE SU APARATO PODRÍA ANULAR LA GARANTÍA.

AVISO

Para reducir el riesgo de incendio o descarga eléctrica, no exponga la unidad a la lluvia ni a la humedad.

ES

INSTRUCCIONES DE SEGURIDAD IMPORTANTES -GUARDE ESTAS INSTRUCCIONES PELIGRO PARA REDUCIR EL RIESGO DE INCENDIO O DESCARGA ELÉCTRICA, SIGA ATENTAMENTE ESTAS INSTRUCCIONES

PRECAUCIÓN

Batería

Si la batería se manipula indebidamente, puede explotar y causar un incendio o provocarle quemaduras químicas. Tenga en cuenta las siguientes precauciones.

- · No desmonte el producto.
- No aplaste ni exponga la batería a impactos tales como golpes o caídas, ni la deje caer o la pise.
- No provoque un cortocircuito en la batería ni permita que objetos metálicos entren en contacto con sus terminales.
- No exponga la batería a temperaturas superiores a 60 °C como a la luz solar directa, o en el interior de un automóvil estacionado al sol.
- No la incinere ni la arroje al fuego.
- · No manipule baterías de iones de litio dañadas o con fugas.
- Asegúrese de cargar la batería con un cargador de baterías original de Sony o con un dispositivo que pueda cargarla.
- Mantenga la batería fuera del alcance de niños pequeños.
- Mantenga la batería seca.

- Sustitúyala únicamente por otra del mismo tipo o equivalente recomendada por Sony.
- Deshágase de la baterías usada lo antes posible según el procedimiento que se describe en las instrucciones.

Adaptador de alimentación de ca (FUENTE DE ALIMENTACIÓN)

Conecte el adaptador de ca a la toma de corriente de la pared más cercana. Si ocurriera algún problema mientras utiliza el adaptador de ca, corte inmediatamente la corriente desenchufando el cable de alimentación de la toma de corriente de la pared.

El cable de alimentación, si se ha suministrado, está diseñado de manera específica para utilizarse únicamente con esta cámara y no debería utilizarse con ningún otro equipo eléctrico.

Atención para los clientes en Europa

Aviso para los clientes de países en los que se aplican las directivas de la UE

El fabricante de este producto es Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075, Japón. El representante autorizado en lo referente al cumplimiento de la directiva EMC y a la seguridad de los productos es Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Alemania. Para resolver cualquier asunto relacionado con el soporte técnico o la garantía, consulte las direcciones que se indican en los documentos de soporte técnico y garantía suministrados por separado.

Este producto se ha probado y cumple con la normativa que establece la Directiva EMC si se utiliza un cable de conexión de menos de 3 metros de longitud.

Atención

Los campos electromagnéticos a frecuencias específicas podrán influir en la imagen y el sonido de esta unidad.

Aviso

Si la electricidad estática o el electromagnetismo interrumpen la transmisión de datos (fallo), reinicie la aplicación o desconecte el cable de comunicación (USB, etc.) y vuelva a conectarlo.

Tratamiento de los equipos eléctricos y electrónicos al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de tratamiento selectivo de residuos)



Este símbolo en el equipo o en su embalaje indica que el presente producto no puede ser tratado como residuos doméstico normal. Debe entregarse en el correspondiente punto de recogida de equipos eléctricos y electrónicos. Al asegurarse de que este producto se desecha correctamente, usted ayuda a prevenir las consecuencias potencialmente negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de este producto. El reciclaje de materiales ayuda a conservar los recursos

naturales. Para recibir información detallada sobre el reciclaje de este producto, póngase en ES contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

Tratamiento de las baterías al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de tratamiento selectivo de residuos)



Este símbolo en la batería o en el embalaje indica que la batería proporcionada con este producto no puede ser tratada como un residuo doméstico normal.

En algunas baterías este símbolo puede utilizarse en combinación con un símbolo químico. El símbolo químico del mercurio (Hg) o del plomo (Pb) se añadirá si la batería contiene más del 0,0005% de mercurio o del

0,004% de plomo.

Al asegurarse de que estas baterías se desechan correctamente, usted ayuda a prevenir las consecuencias potencialmente negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de la batería. El reciclaje de materiales ayuda a conservar los recursos naturales.


En el caso de productos que por razones de seguridad, rendimiento o mantenimiento de datos sea necesaria una conexión permanente con la batería incorporada, esta batería solo deberá ser reemplazada por personal técnico cualificado para ello.


Para asegurarse de que la batería será tratada correctamente, entregue el producto al final de su vida útil en un punto de recogida para el reciclado de aparatos eléctricos y electrónicos

Para las demás baterías, consulte la sección donde se indica cómo extraer la batería del producto de forma segura. Deposite la batería en el correspondiente punto de recogida para el reciclado de baterías.

Para recibir información detallada sobre el reciclaje de este producto o de la batería, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

Identificación de las partes

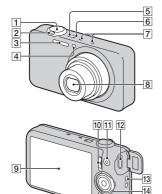



17

- 1 Botón del disparador
- 2 Para tomar imagen: Palanca W/T (Zoom)


Para visualizar: Palanca Q (Zoom de reproducción)/Palanca

Botón ON/OFF (Alimentación)


- 3 Flash
- 4 Lámpara del autodisparador/ Lámpara del captador de sonrisas/Iluminador AF

- 6 Lámpara de alimentación/carga
- 7 Micrófono
- 8 Objetivo
- 9 Pantalla LCD
- Onmutador de modo
 - (Imagen fija)/ (Barrido panorámico)/ (Película)
- 11 Botón MOVIE (Película)
- 12 Minitoma HDMI
- 13 Gancho para correa de muñeca
- 14 Anillo de control
- 15 Botón (Reproducción)
- 16 Botón ?/m (Guía en la cámara/ Eliminar)
- 17 Botón MENU
- 18 Marca **▼** (TransferJetTM)
- 19 Ranura de inserción de la batería
- 20 Rosca para trípode
 - Utilice un trípode con un tornillo de menos de 5,5 mm de longitud.
 De lo contrario, no podrá sujetar firmemente la cámara, y es posible que se dañe la cámara.
- 21 Altavoz
- 22 Palanca de expulsión de la batería
- 23 Lámpara de acceso
- 24 Ranura de tarjeta de memoria
- 25 Conector micro USB
- Tapa de la batería/tarjeta de memoria

Inserción de la batería




Palanca de expulsión de la batería



- 1 Abra la tapa.
- 2 Inserte la batería.
 - Mientras pulsa la palanca de expulsión de la batería, inserte la batería como se muestra en la ilustración. Asegúrese de que la palanca de expulsión de la batería se bloquea después de insertarla.
 - El cerrar la tapa con la batería insertada incorrectamente podrá dañar la cámara.

Carga de la batería

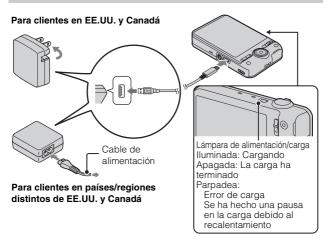

- 1 Conecte la cámara al adaptador de alimentación de ca (suministrado), utilizando el cable micro USB (suministrado).
- 2 Conecte el adaptador de alimentación de ca a la toma de corriente de la pared.

Se ilumina en naranja la lámpara de alimentación/carga, y comienza la carga.

- Apague la cámara mientras carga la batería.
- Puede cargar la batería incluso cuando esté parcialmente cargada.
- Cuando la lámpara de alimentación/carga parpadee y la carga no haya finalizado, extraiga la batería y vuelva a insertarla.

ES

Notas

- Si la lámpara de alimentación/carga de la cámara parpadea cuando el adaptador de alimentación de ca está conectado a la toma de corriente de la pared, indica que la carga se ha detenido temporalmente porque la temperatura está fuera del rango recomendado. Cuando la temperatura vuelve dentro del rango apropiado, se reanuda la carga. Le recomendamos cargar la batería a una temperatura ambiente de entre 10 °C a 30 °C
- Es posible que la batería no se cargue eficazmente si la sección del terminal de la batería está sucia. En este caso, quite el polvo ligeramente utilizando un paño suave o un bastoncillo de algodón para limpiar la sección del terminal de la batería.
- Conecte el adaptador de alimentación de ca (suministrado) a la toma de corriente de la pared más cercana. Si se produce algún malfuncionamiento mientras se utiliza el adaptador de alimentación de ca, desenchufe la clavija de la toma de corriente de la pared inmediatamente para desconectarlo de la fuente de alimentación.
- Cuando termine la carga, desconecte el adaptador de alimentación de ca de la toma de corriente de la pared.
- Asegúrese de utilizar solamente baterías, cable micro USB (suministrado) y adaptador de alimentación de ca (suministrado) de la marca Sony genuinos.
- Con el cargador de baterías BC-TRN2 (se vende por separado) se puede cargar rápidamente la batería recargable NP-BN suministrada con este modelo. Con el cargador de baterías BC-TRN (se vende por separado) no se puede cargar rápidamente la batería recargable NP-BN suministrada con este modelo.

■ Tiempo de carga (Carga completa)


El tiempo de carga es de aproximadamente 115 min (minuto) utilizando el adaptador de alimentación de ca (suministrado).

Nota

- • El tiempo de carga de arriba se aplica cuando se carga una batería completamente agotada a una temperatura de 25 °C
 - La carga podrá llevar más tiempo dependiendo de las condiciones de utilización y las circunstancias.

■ Carga conectando a un ordenador

La batería se puede cargar conectando la cámara a un ordenador utilizando el cable micro USB.



Nota

- Tenga en cuenta los puntos siguientes cuando cargue a través de un ordenador:
 - Si conecta la cámara a un ordenador portátil que no está conectado a la fuente de corriente, el nivel de la batería del portátil disminuirá. No cargue durante un periodo de tiempo prolongado.
 - No encienda/apague o reinicie el ordenador, ni lo reanude desde el modo de ahorro de energía cuando se encuentre establecida una conexión USB entre el ordenador y la cámara. La cámara podría causar un malfuncionamiento. Antes de encender/apagar, o reiniciar el ordenador o reanudarlo desde el modo de ahorro de energía, desconecte la cámara y el ordenador.
 - No existen garantías para la carga utilizando un ordenador de diseño particular o un ordenador modificado.

ES

Duración de la batería y número de imágenes que se pueden grabar y reproducir

| | | Duración de la batería | Número de imágenes |
|---------------------------|-----------|----------------------------|-----------------------|
| Tomar (imágenes fijas) | DSC-WX100 | Aprox. 120 min (minuto) | Aprox. 240 imágenes |
| | DSC-WX150 | Aprox. 120 min (minuto) | Aprox. 240 imágenes |
| Ver (imágenes fijas) | DSC-WX100 | Aprox. 180 min (minuto) | Aprox. 3 600 imágenes |
| | DSC-WX150 | Aprox. 180 min (minuto) | Aprox. 3 600 imágenes |
| Tomar | DSC-WX100 | Aprox. 60 min (minuto) | _ |
| (películas) | DSC-WX150 | Aprox. 60 min (minuto) | _ |

Notas

- El número de arriba de imágenes se aplica cuando la batería está completamente cargada. El número de imágenes podrá disminuir dependiendo de las condiciones de uso.
- El número de imágenes que se puede grabar es cuando las tomas se hacen en las condiciones siguientes:
 - Utilización de "Memory Stick PRO Duo" (Mark2) de Sony (se vende por separado)
 - La batería se utiliza a una temperatura ambiente de 25 °C
- [Resolución visualiz.]: [Estándar]
- El número para "Tomar (imágenes fijas)" está basado en el estándar CIPA, y es tomando imágenes en las condiciones siguientes:

(CIPA: Camera & Imaging Products Association)

- DISP (Ajuste pantalla) está ajustado a [ACTIVADO].
- Tomando una imagen cada 30 s (segundo)
- Se cambia el zoom alternativamente entre los extremos W y T.
- El flash destella una de cada dos veces.
- La alimentación se activa y desactiva una vez cada diez veces.
- La duración de la batería para películas se aplica tomando en las condiciones siguientes:
 - Calidad película: AVC HD HQ
 - Cuando finalice la toma continua debido a los límites establecidos (página 26), pulse el botón MOVIE (Película) otra vez y continúe tomando. Las funciones de toma tal como el zoom no responderán.

■ Suministro de alimentación


A la cámara se le puede suministrar alimentación desde la toma de corriente de la pared conectando el adaptador de alimentación de ca, utilizando el cable micro USB (suministrado).

Puede importar imágenes a un ordenador sin preocuparse de si se agota la batería conectando la cámara a un ordenador utilizando el cable micro USB. Además, puede utilizar el adaptador de alimentación de ca AC-UD10 (se vende por separado) para hacer la toma y así suministrar alimentación cuando toma imágenes.

Notas

- La alimentación no se puede suministrar cuando la batería no está insertada en la cámara.
- Cuando la cámara esté conectada directamente a un ordenador o a una toma de
 corriente utilizando el adaptador de alimentación de ca suministrado, el
 suministro de alimentación estará disponible solamente en modo de reproducción.
 Si la cámara está en modo de toma de imagen o mientras usted está cambiando los
 ajustes de la cámara, no se suministrará alimentación aunque haga una conexión
 USB utilizando el cable micro USB.
- Si conecta la cámara y un ordenador utilizando el cable micro USB mientras la cámara está en modo de reproducción, la visualización en la cámara cambiará de la pantalla de reproducción a la pantalla de conexión USB. Pulse el botón (Reproducción) para cambiar a la pantalla de reproducción.

Inserción de una tarjeta de memoria (se vende por separado)





- Abra la tapa.
- 2 Inserte la tarjeta de memoria (se vende por separado).
 - Con la esquina cortada orientada como en la ilustración, inserte la tarjeta de memoria hasta que encaje en su sitio con un chasquido.
- 3 Cierre la tapa.

■ Tarjetas de memoria que se pueden utilizar

| | Tarjeta de memoria | Para imágenes fijas | Para películas |
|---|---------------------------------|------------------------|--------------------------|
| | Memory Stick PRO Duo | 0 | O (Mark2 solamente) |
| Α | Memory Stick PRO-HG Duo | 0 | 0 |
| | Memory Stick Duo | 0 | _ |
| В | Memory Stick Micro (M2) | 0 | _ |
| | Memory Stick Micro (Mark2) | 0 | 0 |
| | Tarjeta de memoria SD | 0 | O (Clase 4 o más rápida) |
| С | Tarjeta de memoria SDHC | 0 | O (Clase 4 o más rápida) |
| | Tarjeta de memoria SDXC | 0 | O (Clase 4 o más rápida) |
| D | Tarjeta de memoria microSD | 0 | O (Clase 4 o más rápida) |
| | Tarjeta de memoria microSDHC | 0 | O (Clase 4 o más rápida) |

- En este manual, los productos en la tabla se conocen colectivamente con el nombre siguiente:
 - A: "Memory Stick Duo"
 - B: "Memory Stick Micro"
 - C: Tarjeta SD
 - D: Tarjeta de memoria microSD

Nota

 Para utilizar un soporte "Memory Stick Micro" o una tarjeta de memoria microSD con la cámara, asegúrese de insertarla en un adaptador exclusivo en primer lugar.

Para extraer la tarjeta de memoria/batería

Tarjeta de memoria: Empuje la tarjeta de memoria hacia dentro una vez para expulsar la tarjeta de memoria.


Batería: Deslice la palanca de expulsión de la batería. Asegúrese de no dejar caer la batería.

Nota

 No extraiga nunca la tarjeta de memoria/batería cuando la lámpara de acceso (página 6) esté encendida. Esto podría ocasionar daño a los datos en la tarjeta de memoria/memoria interna.

Ajuste del reloj

Lámpara de alimentación/carga (verde)



Seleccione elementos: **△**/**▼**/**◄**/**►** Ajuste el valor numérico de fecha y


hora: \\/\/\/\/\/\/\/\/\/\/Aiuste: ●

1 Pulse el botón ON/OFF (Alimentación).

Cuando encienda la cámara por primera vez se visualizará el ajuste de Fecha y Hora.

- Es posible que lleve algún tiempo en conectarse la alimentación y permitir realizar operaciones.
- 2 Seleccione un idioma deseado.
- 3 Seleccione un lugar geográfico deseado siguiendo las instrucciones en pantalla, después pulse ● del anillo de control.
- 4 Ajuste [Format fecha y hora], [Hora verano] y [Fecha y hora], después seleccione [OK] → [OK].
 - Medianoche se indica como 12:00 AM, y mediodía como 12:00 PM.
- 5 Siga las instrucciones de la pantalla.
 - La batería se descargará rápidamente cuando:
 - -[Resolución visualiz.] está ajustado a [Alta].

Toma de imágenes fijas/películas

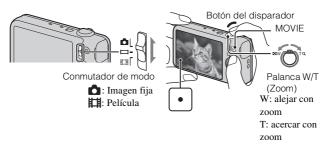

Toma de imágenes fijas

Pulse el botón del disparador hasta la mitad para enfocar.

Cuando la imagen está enfocada, suena un pitido y se ilumina el indicador

2 Pulse el botón del disparador a fondo para tomar una imagen.

Toma películas


- 1 Pulse el botón MOVIE (Película) para comenzar a grabar.
 - Utilice la palanca W/T (zoom) para cambiar la escala del zoom.
 - Pulse el botón del disparador para tomar imágenes fijas mientras continúa grabando la película.
- 2 Pulse el botón MOVIE otra vez para detener la grabación.

Notas

- El sonido del objetivo y la palanca funcionando se grabará cuando se accione la función de zoom mientras se toma una película. Es posible que también se grabe el sonido del botón MOVIE funcionando cuando termine la grabación de película.
- Se puede filmar continuamente durante 29 min (minuto) aproximadamente de una vez con los ajustes predeterminados de la cámara y cuando la temperatura es de aproximadamente 25 °C

Cuando termine la grabación de película, puede volver a grabar pulsando el botón MOVIE otra vez. Es posible que la grabación se detenga para proteger la cámara dependiendo de la temperatura ambiente.

Visualización de imágenes

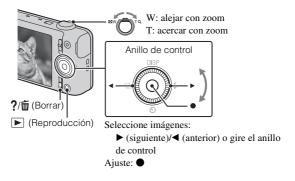

Pulse el botón ► (Reproducción).

 Cuando se reproduzcan en esta cámara imágenes de una tarjeta de memoria grabadas con otras cámaras, aparecerá la pantalla de registro para el archivo de datos.

Selección de la imagen siguiente/anterior

Seleccione una imagen pulsando ▶ (siguiente)/◀ (anterior) del anillo de control o girando el anillo de control. Pulse ● en el centro del anillo de control para ver películas.

■ Eliminación de una imagen

- 1 Pulse el botón ?/m (Borrar).
- ② Seleccione [Esta ima] con ▲ del anillo de control, después pulse ●.

Para volver a la toma de imágenes

Pulse el botón del disparador hasta la mitad.

Guía en la cámara

Esta cámara está equipada con una guía de instrucciones incorporada. Esto le permite buscar las funciones de la cámara de acuerdo con sus necesidades.




- 1 Pulse el botón MENU.
- 2 Seleccione el elemento de MENU deseado, después pulse el botón 介值 (Guía en la cámara).

Se visualiza la guía de operación para el elemento seleccionado.

 Si pulsa el botón ?/m (Guía en la cámara) cuando no está visualizada la pantalla de MENU, puede buscar la guía utilizando palabras claves o iconos.

Presentación de otras funciones

Utilizando el anillo de control o el botón MENU de la cámara se puede hacer uso de otras funciones durante la toma o reproducción de imágenes. Esta cámara está equipada con una guía de funciones que le permite seleccionar fácilmente entre las funciones. Mientras se muestra la guía, puede utilizar varias funciones.



■ Anillo de control

DISP (Ajuste pantalla): Le permite cambiar la visualización en pantalla.

- 🐧 (Contador automát.): Le permite utilizar el autodisparador.
- (Ajustes de captura continua): Le permite utilizar el modo de toma con ráfaga.
- ‡ (Flash): Le permite seleccionar un modo de flash para imágenes fijas. Botón central (Enfoque seguido): La cámara sigue al motivo y ajusta el enfoque automáticamente incluso cuando el motivo se está moviendo.

■ Elementos del menú

Toma de imagen

| Modo Grabación | Selecciona el modo de grabación de imagen fija. |
|---|---|
| Escena toma película | Selecciona el modo de grabación de película. |
| Escena de toma panorámica | Selecciona el modo de grabación cuando se toman imágenes panorámicas. |
| Efecto de foto | Toma una imagen fija con una textura original de acuerdo con el efecto deseado. |
| Selección escena | Selecciona ajustes preajustados para corresponder con varias condiciones de escena. |
| Modo fácil | Toma imágenes fijas utilizando el mínimo de funciones. |
| Efecto de desenfoque | Ajusta el nivel del efecto de desenfoque de fondo cuando se toma en modo Desenfoque de fondo. |
| Tamaño img fija(Dual Rec) | Establece el tamaño de la imagen fija tomada mientras se graba una película. |
| Tamaño img fija/ Tamaño imagen panorámica/ Tamaño película/ Calidad de película | Selecciona el tamaño de imagen y la calidad para imágenes fijas, imágenes panorámicas o archivos de película. |
| Efecto pintura HDR | Cuando está seleccionado [Pintura HDR] en Efecto foto, establece el nivel de efecto. |
| Área de énfasis | Cuando está seleccionado [Miniatura] en Efecto foto, establece la parte a enfocar. |
| Tono de color | Cuando está seleccionado [Cámara juguete] en Efecto foto, establece el tono de color. |
| Color Extraído | Cuando está seleccionado [Color parcial] en Efecto foto, establece el color a extraer. |
| Efecto de acuarela | Cuando está seleccionado [Acuarela] en Efecto foto, establece el nivel de efecto. |
| Efecto de ilustración | Cuando está seleccionado [Ilustración] en Efecto foto, establece el nivel de efecto. |
| EV | Ajusta la exposición manualmente. |

| ISO | Ajusta la sensibilidad luminosa. |
|-------------------------------|--|
| Balance Blanco | Ajusta los tonos de color de una imagen. |
| Balance Blanco submarino | Ajusta los tonos de los colores cuando se hace una toma submarina. |
| Enfoque | Selecciona el método de enfoque. |
| Modo medición | Selecciona el modo de medición que establece qué parte del motivo se mide para determinar la exposición. |
| Intervalo de captura continua | Selecciona el número de imágenes tomadas por segundo para tomas con ráfaga. |
| Reconocimiento de escena | Ajusta para detectar automáticamente las condiciones de la toma. |
| Efecto piel suave | Ajusta el Efecto piel suave y el nivel del efecto. |
| Captador de sonrisas | Ajusta para que la cámara accione automáticamente el obturador cuando se detecta una sonrisa. |
| Sensibilidad de sonrisa | Ajusta la sensibilidad de la función Captador de sonrisas para detectar sonrisas. |
| Detección de cara | Selecciona la detección de caras y hace ajustes automáticamente. |
| Reducc ojos cerrados | Ajusta para tomar automáticamente dos imágenes y selecciona la imagen en la que los ojos no están parpadeando. |
| SteadyShot película | Ajusta la intensidad de SteadyShot en Modo película. Si cambia el ajuste para [SteadyShot película], cambiará el ángulo de visión. |
| Guía en la cámara | Busca funciones de la cámara de acuerdo con sus necesidades. |

| Modo fácil | Aumenta el tamaño de texto en la pantalla para facilitar el uso. |
|--------------------------------|--|
| Diapositivas | Selecciona un método de reproducción continua. |
| Enviar por TransferJet | Transfiere datos alineando a corta distancia dos productos equipados con TransferJet. |
| Borrar | Elimina una imagen. |
| Retocar | Retoca una imagen utilizando varios efectos. |
| Efecto de foto | Añade varias texturas a las imágenes. |
| Visionado 3D | Ajusta para reproducir imágenes tomadas en modo 3D en un televisor 3D. |
| Modo visualización | Selecciona el formato de visualización para imágenes. |
| Visualiza grupo de capt. cont. | Selecciona para visualizar imágenes de ráfaga en grupos o visualizar todas las imágenes durante la reproducción. |
| Proteger | Protege las imágenes. |
| Impresión (DPOF) | Añade una marca de orden de impresión a una imagen fija. |
| Rotar | Gira una imagen fija hacia la izquierda. |
| Guía en la cámara | Busca funciones de la cámara de acuerdo con sus necesidades. |

■ Elementos de ajuste

Si pulsa el botón MENU mientras toma una imagen o durante la reproducción, se proveerá (Ajustes) como selección final. Puede cambiar los ajustes predeterminados en la pantalla (Ajustes).

| Ajustes de Toma | Formato de película/Iluminador AF/Cuadrícula/Zoom Imag. Clara/Zoom digital/Reducc. ruido viento/Reduc. ojos rojos/Aviso ojos cerrados/Inscribir fecha/ Resolución visualiz. |
|-----------------------------------|---|
| γ T Ajustes Principales | Pitido/Luminosidad panel/Language Setting/Color visualización/Modo demostración/Inicializar/Guía funciones/CTRL. POR HDMI/Modo eco/Ajuste conexión USB/Alimentación USB/Ajuste LUN/Desc música/Vaciar música/TransferJet/Eye-Fi/Versión |
| Herramienta Tarjeta Memoria* | Formatear/Crear Carpeta Grab/Camb. Carp. Grab/ ElimCarpGrabación/Copiar/Número Archivo |
| 4 Ajustes de Reloj | Configuración área/Config.fecha y hora |

^{*} Si no hay insertada una tarjeta de memoria, se visualizará (Herramienta Memoria Interna) y solamente se podrá seleccionar [Formatear].

Instalación de aplicación de PC (Windows)

El software incorporado "PlayMemories Home" le permite importar imágenes fijas y películas a su ordenador y utilizarlas.

Puede tomar o reproducir imágenes en esta cámara aunque no instale "PlayMemories Home", sin embargo, necesitará "PlayMemories Home" para importar películas AVCHD a su ordenador.

- Conecte la cámara a un ordenador.
- 2 Windows 7: [Equipo] → icono de cámara → icono de soporte → Haga doble clic en [PMHOME.EXE] Windows XP/Vista: [Equipo] (en Windows XP, [Mi PC]) → [PMHOME] → Haga doble clic en [PMHOME.EXE]
- 3 Siga las instrucciones de la pantalla para completar la instalación.

Nota

 "PlayMemories Home" no es compatible con Mac OS. Si reproduce imágenes en un ordenador Mac, utilice las aplicaciones que hay instaladas en su ordenador Mac.

Para más detalles, consulte http://www.sony.co.jp/imsoft/Mac/

■ Características de "PlayMemories Home"

Lo de abajo son ejemplos de las funciones disponibles cuando usted utiliza "PlayMemories Home". Para sacar provecho a las distintas funciones de "PlayMemories Home", conéctese a Internet e instale la "Función adicional".

- Puede importar imágenes tomadas con la cámara a un ordenador y visualizarlas.
- Puede visualizar imágenes almacenadas en un ordenador por fecha de toma en una visualización de calendario.
- Puede corregir imágenes fijas (Corrección ojos rojos, etc.), imprimir las imágenes, enviar imágenes por correo electrónico, y cambiar la fecha y hora de toma.
- Puede guardar e imprimir imágenes con la fecha.
- Puede crear un disco de películas AVCHD importadas a un ordenador. (Función adicional)

Número de imágenes fijas y tiempo grabable de películas

El número de imágenes fijas y el tiempo que se puede grabar podrán variar dependiendo de las condiciones de la toma y de la tarjeta de memoria.

Imágenes fijas

(Unidades: Imágenes)

| Cap | acidad | Memoria interna | Tarjeta de memoria |
|-----------|---------------|-----------------|--------------------|
| Tamaño | $\overline{}$ | Aprox. 19 MB | 2 GB |
| 18M | | 3 | 295 |
| VGA | | 65 | 6 400 |
| 16:9(13M) | | 3 | 330 |

■ Películas

La tabla de abajo muestra los tiempos de grabación máximos aproximados. Estos son los tiempos totales para todos los archivos de película. Se puede filmar continuamente durante 29 min (minuto) aproximadamente. El tamaño máximo de un archivo de película de formato MP4 es de hasta aproximadamente 2 GB

(h (hora), min (minuto))

| Capacidad | Memoria interna | Tarjeta de memoria |
|-----------------|-----------------|--------------------|
| Tamaño | Aprox. 19 MB | 2 GB |
| AVC HD 24M (FX) | _ | 10 min (10 min) |
| AVC HD 9M (HQ) | _ | 20 min (15 min) |
| MP4 12M | _ | 15 min |
| MP4 3M | | 1 h 5 min |

El número dentro de () es el tiempo grabable mínimo.

• El tiempo grabable de películas varía porque la cámara está equipada con VBR (Velocidad de bits variable), que ajusta automáticamente la calidad de imagen dependiendo de la escena que se está tomando. Cuando grabe un motivo que se mueve rápidamente, la imagen será más clara pero el tiempo grabable será más corto porque se requiere más memoria para grabar. El tiempo grabable también varía dependiendo de las condiciones de la toma, el motivo o los ajustes de calidad/tamaño de imagen.

Notas sobre la utilización de la cámara

Funciones incorporadas en esta cámara

 Este manual describe cada una de las funciones de los dispositivos compatibles/ incompatibles con TransferJet, dispositivos compatibles con 1080 60i y dispositivos compatibles con 1080 50i.

Para comprobar si su cámara permite la función TransferJet, y saber si es un dispositivo compatible con 1080 60i o dispositivo compatible con 1080 50i, busque las siguientes marcas en la parte inferior de la cámara.

Dispositivo compatible con TransferJet: (TransferJet)

Dispositivo compatible con 1080 60i: 60i Dispositivo compatible con 1080 50i: 50i

- No vea imágenes 3D tomadas con esta cámara durante periodos de tiempo prolongados en monitores compatibles con 3D.
- Cuando vea imágenes 3D tomadas con esta cámara en monitores compatibles con 3D, es posible que note molestias en forma de cansancio de la vista, fatiga, o náuseas. Para evitar estos síntomas, recomendamos que haga descansos regulares. Sin embargo, necesitará determinar por sí mismo la duración y la frecuencia de los descansos que requiere, porque éstos varían de una persona a otra. Si nota cualquier tipo de molestia, detenga el visionado de imágenes 3D hasta que se sienta mejor, y consulte con un médico si lo cree necesario. Además, consulte los manuales de instrucciones suministrados con el dispositivo o software que ha conectado o está utilizando con esta cámara. Tenga en cuenta que la vista de un niño aún está en estado de desarrollo (particularmente los niños de menos de 6 años). Consulte con un pediatra u oculista antes de permitir que su niño vea imágenes 3D, y asegúrese de que él/ella observa las precauciones de arriba cuando vea tales imágenes.

Uso y cuidados

Evite un manejo brusco, desmontaje, modificación, golpes físicos, o impactos tales como golpear, dejar caer, o pisar el producto. Sea especialmente cuidadoso con el objetivo.

Notas sobre la grabación/reproducción

- Antes de comenzar a grabar, haga una grabación a modo de prueba para asegurarse de que la cámara está funcionando correctamente.
- La cámara no está hecha a prueba de polvo, ni a prueba de salpicaduras, ni a prueba de agua.
- Evite exponer la cámara al agua. Si entra agua dentro de la cámara, podrá ocurrir un mal funcionamiento. En algunos casos, la cámara no podrá ser reparada.
- No dirija la cámara hacia el sol ni hacia otras luces intensas. Podrá ocasionar un mal funcionamiento de la cámara.
- Si se produce condensación de humedad, elimínela antes de utilizar la cámara.
- No agite ni golpee la cámara. Podría ocasionar un mal funcionamiento y no poder grabar imágenes. Además, el soporte de grabación podría quedar inutilizable o dañarse los datos de imagen.

No utilice o almacene la cámara en los siguientes lugares

- En un lugar muy caluroso, frío o húmedo
 En lugares tales como en un automóvil aparcado al sol, es posible que el cuerpo de
 la cámara se deforme y esto podrá ocasionar un mal funcionamiento.
- Bajo la luz solar directa o cerca de una estufa
 El cuerpo de la cámara podrá decolorarse o deformarse, y esto podrá ocasionar un mal funcionamiento.
- En un lugar expuesto a vibración basculante
- Cerca de un lugar que genera ondas de radio intensas, emite radiación o tiene magnetismo fuerte. De lo contrario, es posible que la cámara no pueda grabar o reproducir imágenes correctamente.
- · En lugares arenosos o polvorientos
 - Tenga cuidado de no dejar entrar dentro de la cámara arena o polvo. Esto podrá ocasionar un mal funcionamiento en la cámara, y en algunos casos este mal funcionamiento no podrá repararse.

Acerca del transporte

No se siente en una silla u otro lugar con la cámara en el bolsillo trasero de sus pantalones o falda, porque podrá ocasionar un mal funcionamiento de la cámara o dañarla.

Notas sobre la pantalla y el objetivo

La pantalla está fabricada utilizando tecnología de muy alta precisión por lo que más del 99,99 % de los píxeles son operativos para uso efectivo. Sin embargo, es posible que aparezcan algunos puntos diminutos negros y/o brillantes (de color blanco, rojo, azul o verde) en la pantalla. Estos puntos son un resultado normal del proceso de fabricación, y no afectan a la grabación.

Acerca de la temperatura de la cámara

Es posible que la cámara y la batería se sobrecalienten debido al uso continuo, pero no se trata de un fallo de funcionamiento.

Dependiendo de la temperatura de la cámara y de la batería, es posible que no pueda grabar películas o que la alimentación se desconecte automáticamente para proteger la cámara.

Se visualizará un mensaje en la pantalla antes de que se desconecte la alimentación o ya no podrá grabar películas. En este caso, deje desconectada la alimentación y espere hasta que la temperatura de la cámara y la batería descienda. Si conecta la alimentación sin dejar que la cámara y la batería se enfríen suficientemente, es posible que la alimentación se desconecte otra vez o que no pueda grabar películas.

Acerca de la carga de la batería

Si carga una batería que no ha sido utilizada durante largo tiempo, es posible que no ES pueda cargarla hasta la capacidad apropiada.

Esto se debe a las características de la batería, y no es un malfuncionamiento. Cargue la batería otra vez.

Aviso sobre los derechos de autor

Los programas de televisión, películas, cintas de vídeo y demás materiales pueden estar protegidos por copyright. La grabación no autorizada de tales materiales puede ir en contra de los artículos de las leyes de copyright.

No hay compensación por daño del contenido o fallo de grabación

Sony no compensará por no poder grabar o por la pérdida o daño del contenido grabado debido a un mal funcionamiento de la cámara o el soporte de grabación, etc.

Limpieza de la superficie de la cámara

Limpie la superficie de la cámara con un paño suave ligeramente humedecido con agua, después limpie la superficie con un paño seco. Para evitar dañar el acabado o la envoltura:

 No exponga la cámara a productos químicos tales como diluyente, bencina, alcohol, paños desechables, repelente de insectos, bronceador o insecticida.

Acerca de las ilustraciones

Las ilustraciones utilizadas en este manual son de la DSC-WX100 a menos que se indique de otra forma.

Especificaciones

Cámara

[Sistema]

cámara:

Dispositivo de imagen: Sensor de 7,76 mm (tipo 1/2,3) Exmor R CMOS

Número total de píxeles de la cámara: Aprox. 18,9 Megapíxeles Número efectivo de píxeles de la

Aprox. 18,2 Megapíxeles

Objetivo: Objetivo zoom 10× Sony G f = 4,45 mm - 44,5 mm (25 mm -250 mm (equivalente a película de 35 mm))

F3,3(W) - F5,9(T)

Mientras se toman películas (16:9): 27.5 mm – 275 mm*

Mientras se toman películas (4:3): 33,5 mm – 335 mm*

* Cuando [SteadyShot película] está ajustado a [Estándar]

SteadyShot: Óptico

Control de exposición: Exposición automática, Selección de escena (15 modos)

Balance del blanco: Automático, Luz diurna, Nublado, Fluorescente 1/2/ 3, Incandescente, Flash, Una pulsación

Balance Blanco submarino:

Automático, Submarino 1/2, Una pulsación

Formato de señal:

Para 1080 50i: Color PAL, normas CCIR, especificación HDTV 1080/50i

Para 1080 60i: Color NTSC, normas EIA, especificación HDTV 1080/60i Formato de archivo:

Imágenes fijas: Compatible con JPEG (DCF, Exif, MPF Baseline), compatible con DPOF

Imágenes fijas 3D: Compatible con MPO (MPF Extendido (Imagen

con disparidad)) Películas (Formato AVCHD):

Compatible con formato AVCHD versión 2,0

Vídeo: MPEG-4 AVC/H.264 Audio: Dolby Digital 2 canales, equipado con Dolby Digital Stereo Creator

 Fabricado bajo licencia de Dolby Laboratories.

Películas (Formato MP4): Vídeo: MPEG-4 AVC/H.264 Audio: MPEG-4 AAC-LC 2 canales

Soporte de grabación: Memoria interna (Aprox. 19 MB) "Memory Stick Duo", "Memory Stick Micro", tarjetas SD, tarjeta de memoria microSD

Flash: Alcance del flash (sensibilidad ISO (Índice de exposición recomendado) ajustado a Auto): Aprox. 0,2 m a 3,7 m (W) Aprox. 1,5 m a 2,2 m (T)

ES

[Conectores de entrada y salida]

Conector HDMI: Minitoma HDMI Conector micro USB:

Comunicación USB

Comunicación USB: Hi-Speed USB (USB 2.0)

[Pantalla]

Pantalla LCD:

DSC-WX100:

6,7 cm (tipo 2,7) unidad TFT

DSC-WX150:

7,5 cm (tipo 3,0) unidad TFT

Número total de puntos:

460 800 puntos

[Alimentación, general]

Alimentación: Batería recargable

NP-BN, cc 3,6 V

Adaptador de alimentación de ca (FUENTE DE ALIMENTACIÓN)

AC-UB10/UB10B/UB10C/ UB10D, cc 5 V

Consumo (durante la toma de imagen): 1.0 W

Temperatura de funcionamiento:

0 °C a 40 °C

Temperatura de almacenamiento:

-20 °C a +60 °C

Dimensiones (cumple con CIPA): DSC-WX100: 92,3 mm × 52,4 mm

× 21,6 mm (An/Al/Pr) DSC-WX150: 94.7 mm × 56.4 mm

DSC-WX150: 94,7 mm × 56,4 mm × 21,6 mm (An/Al/Pr)

Peso (cumple con CIPA) (incluyendo la batería NP-BN, "Memory Stick Duo"):

DSC-WX100: Aprox. 124 g DSC-WX150: Aprox. 133 g

Micrófono: Estéreo Altavoz: Monoaural Exif Print: Compatible PRINT Image Matching III: Compatible

Adaptador de alimentación de ca (FUENTE DE ALIMENTACIÓN) AC-UB10/ UB10B/UB10C/UB10D

Requisitos de alimentación: ca 100 V a 240 V 50 Hz/60 Hz 70 mA

Tensión de salida: cc 5 V 0,5 A

Temperatura de funcionamiento: 0 °C a 40 °C

Temperatura de almacenamiento: -20 °C a ±60 °C

Dimensiones:

Aprox. $50 \text{ mm} \times 22 \text{ mm} \times 54 \text{ mm}$ (An/Al/Pr)

Peso:

Para EE.UU. y Canadá:

Aprox. 48 g

Para países o regiones distintos de EE.UU., y Canadá: Aprox. 43 g

Batería recargable NP-BN

Batería utilizada: Batería de litio-ión

Tensión máxima: cc 4,2 V Tensión nominal: cc 3,6 V

Tensión hollima: cc 3,0 V
Tensión de carga máxima: cc 4,2 V
Corriente de carga máxima: 0,9 A
Capacidad:

típica: 2,3 Wh (630 mAh) mínima: 2,2 Wh (600 mAh)

El diseño y las especificaciones están sujetos a cambios sin previo aviso.

Marcas comerciales

- Las marcas siguientes son marcas comerciales de Sony Corporation.
 Cyber-shot*, "Cyber-shot*, "Memory Stick PRO Duo", "Memory Stick PRO-HG Duo", "Memory Stick Duo", "Memory Stick Micro"
- "AVCHD" y el logotipo de
 "AVCHD" son marcas comerciales
 de Panasonic Corporation y Sony
 Corporation.
- Windows es una marca comercial registrada de Microsoft Corporation en los Estados Unidos y/u otros países.
- Mac es una marca comercial registrada de Apple Inc.
- El logotipo de SDXC es una marca comercial de SD-3C, LLC.
- "D" y "PlayStation" son marcas comerciales registradas de Sony Computer Entertainment Inc.
- Además, los nombres de sistemas y productos utilizados en este manual son, en general, marcas comerciales o marcas comerciales registradas de sus respectivos desarrolladores o fabricantes. Sin embargo, las marcas TM o ® no se utilizan en todos los casos en este manual.



 Disfrute aún más de su PlayStation 3 descargando la aplicación para PlayStation 3 en PlayStation Store (donde esté disponible.) La aplicación en la PlayStation 3
requiere una cuenta PlayStation
Network y la descarga de la
aplicación. Podrá acceder a ella en las
zonas donde la PlayStation Store esté
disponible.

En la página Web de atención al cliente puede encontrar información adicional sobre este producto y respuesta a las preguntas hechas con más frecuencia.

http://www.sony.net/

Impreso en papel reciclado en un 70% o más utilizando tinta hecha con aceite vegetal exento de compuesto orgánico volátil (COV).